


The White, Blue and Orange wire goes directly to the connectors (pin1). The Orange, Blue and White wires are about 6" long. The Green, Red and Yellow wires are trimmed to about 3". Solder and shrink-tube each junction. Then shrink-tube the entire end.



Finished Cable should look like this at the sensor end.

After the cable has been installed in the Preamp Box this end is terminated as shown below. The shield wire should be tied to the interface box chassis.

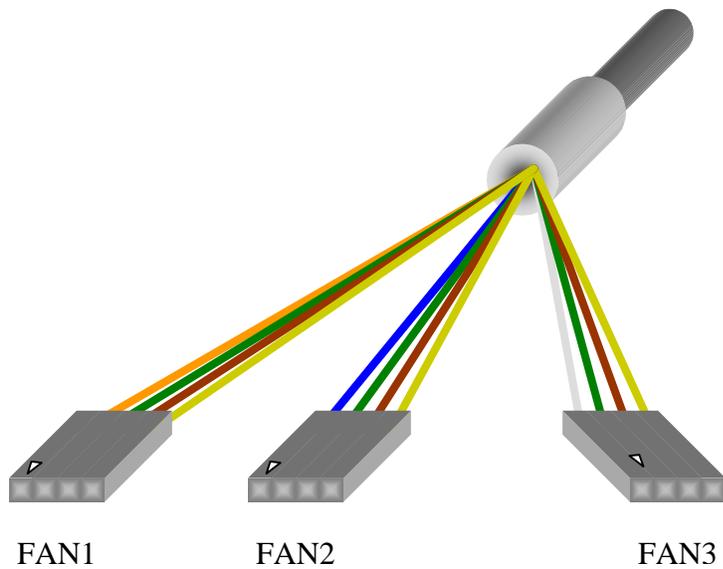