



Detail 1

Open conductors in the three (3) places shown below.
Hand drill the vias only enough to open the trace and cut the trace on the top of the board.
This is the J5 connector.

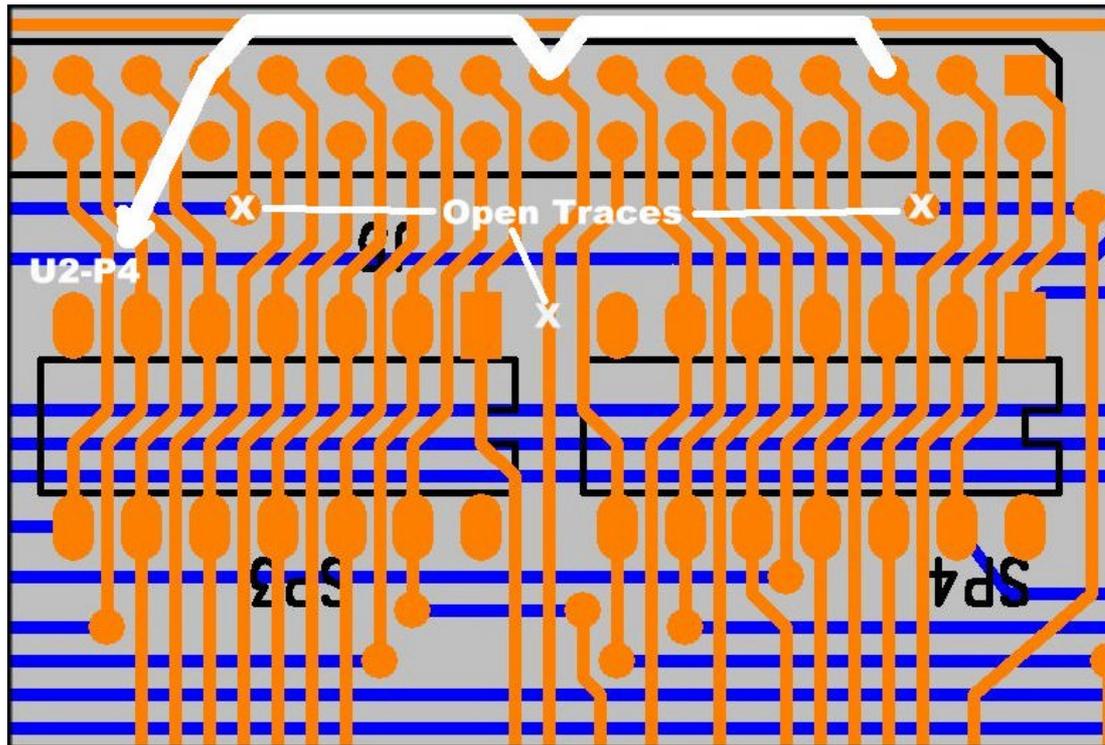

Detail 2

Open conductors in the three (3) places shown below.
Hand drill the vias only enough to open the trace.
This is the J4 connector.

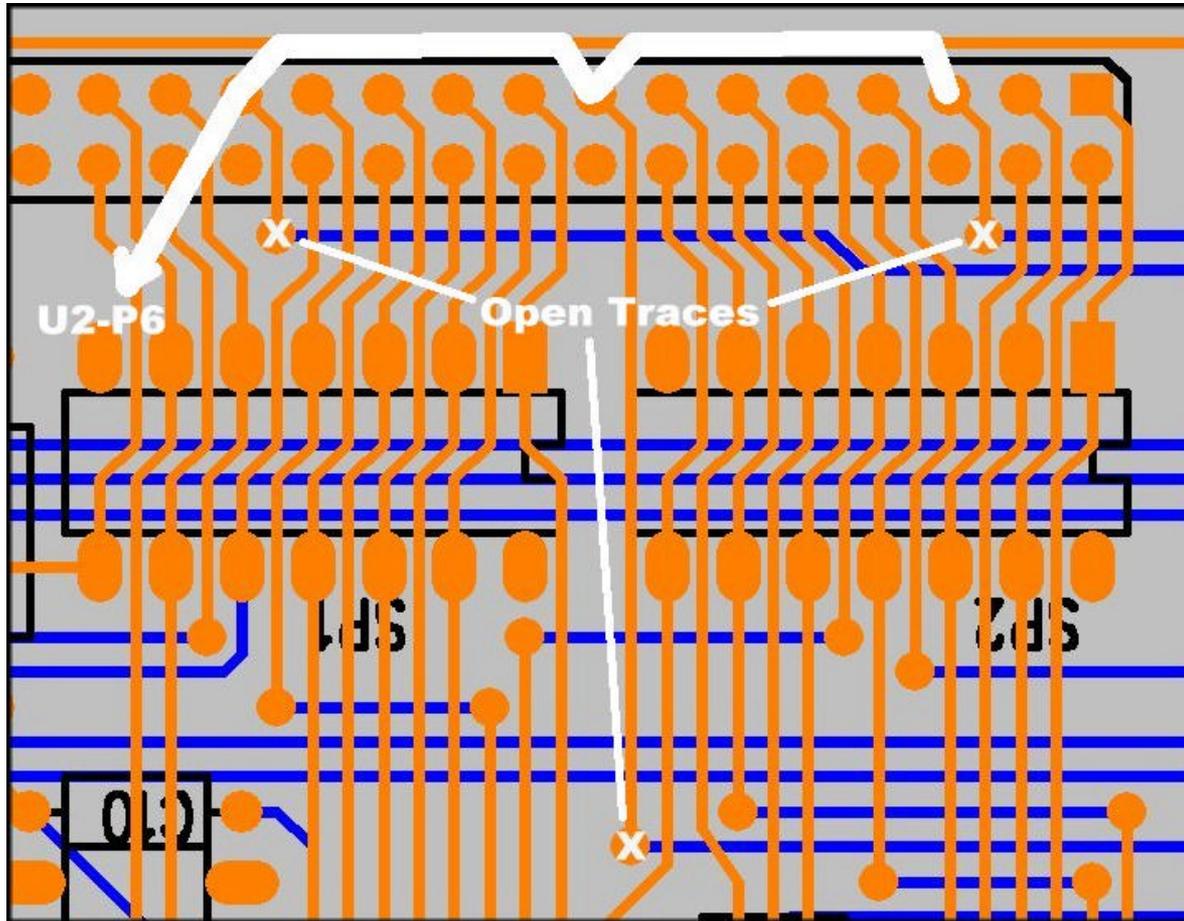

Detail 3

Add a wire from U2 pin 3 to U31 pin 12.

Add a wire from U2 pin 4 to J5 pin 5 & 15 & 25 (daisy chain at the connector).

Add a wire from U2 pin 5 to U31 pin 6.

Add a wire from U2 pin 6 to J4 pin 5 & 15 & 25 (daisy chain at the connector).

